


NOTES:

1. FOR NEW PLANTING AREAS, REMOVE ALL PAVEMENT, GRAVEL, SUB-BASE AND CONSTRUCTION DEBRIS BEFORE PREPARING SOIL AND PLANTING TREES.
2. REMOVE SOIL TO A DEPTH OF 18". SCARIFY, TILL OR OTHERWISE LOOSEN THE REMAINING SOIL TO A DEPTH OF 18". ADD NEW PLANTING MIX AS SPECIFIED.
3. SUBSURFACE DRAINAGE SHALL BE INSTALLED IN ALL MEDIANS AND TIED INTO EXISTING STORM DRAIN SYSTEM. A 4 INCH PERFORATED CORRUGATED PVC DRAIN OR HDPE PER AASHTO M252, TYPE CP (SINGLE-WALL, CORRUGATED) SHALL BE INSTALLED IN EACH MEDIAN AT THE BOTTOM OF THE EXCAVATED AREA. DRAIN SHALL BE COVERED WITH A MINIMUM 6 INCHES OF #57 WASHED STONE, THEN WRAPPED WITH A SPECIFIED NON-WOVEN GEOTEXTILE FABRIC. SPECIAL CARE SHALL BE EXERCISED WHEN FILLING MEDIANS WITH SOIL SO NOT TO CRUSH OR DAMAGE THE DRAINAGE SYSTEM.

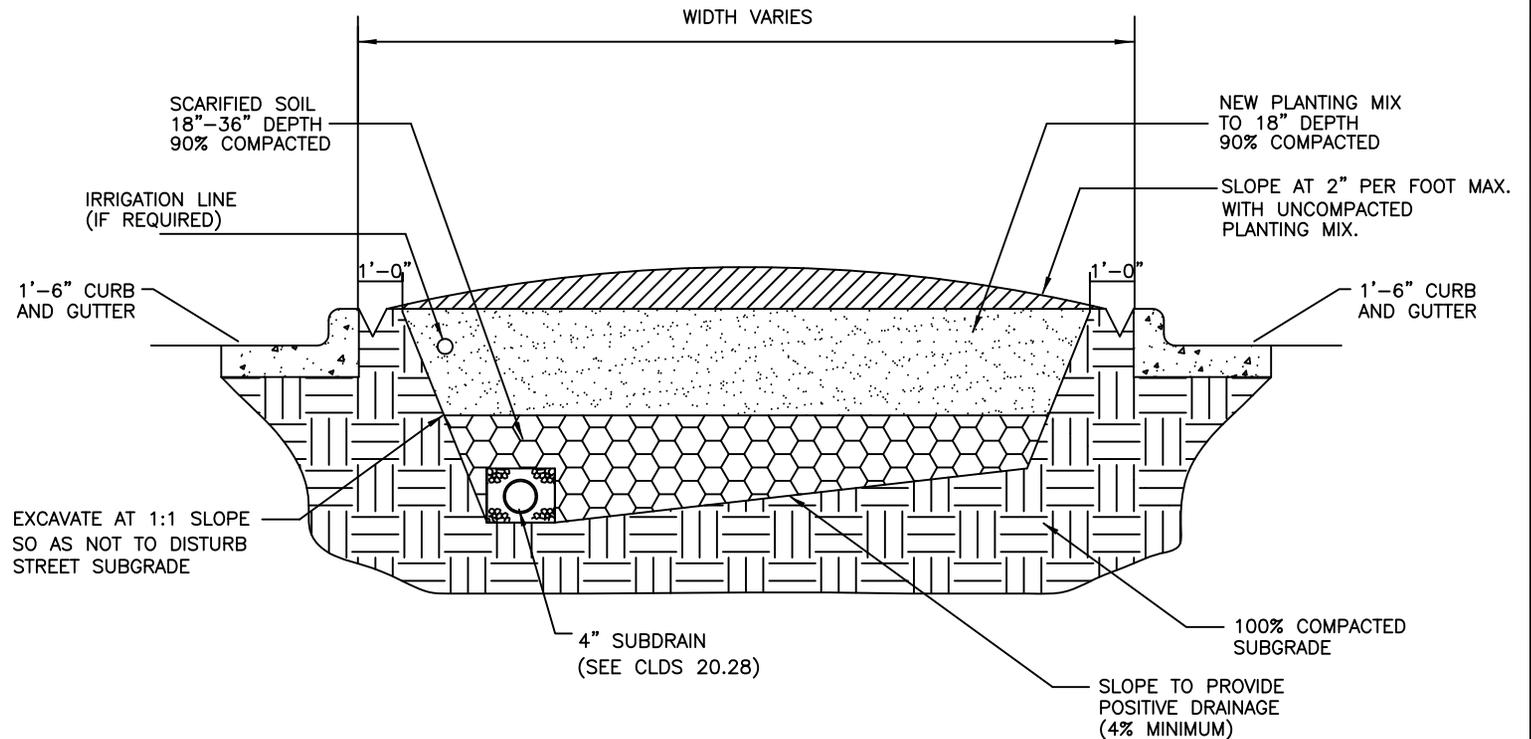

CITY OF CHARLOTTE  
 LAND DEVELOPMENT STANDARDS  
 INCLUDES CHARLOTTE ETJ

48 TO 72 INCH MEDIAN  
 EXCAVATION, DRAINAGE AND BACKFILL

STD. NO.	REV.
40.08C	9